

Rolec EV Zura Clenergy EV Platform Onboarding Guide

• Download the Rolec EV Connect app for your device.









CLENERGY EV







Clenergy		
Created: 25/07/2023 Status: New		
Added: 12/05/2023 3 :		
CREFRESH	11. On the charge point main select OCPP Server.	n menu
	12 Configure you	ייא אר
ADD CHARGEPOINT	Configure you chargepoint	ארג שיני זר
ADD CHARGEPOINT	12 Configure you chargepoint	אני איז. איי איי
	Ceneral Charge Point ID • Serial No DKA71795 0.2.51	л. ЛГ
ADD CHARGEPOINT	12 Configure you chargepoint Ceneral Charge Point ID * Serial No DKA71795 0.2.51 MCU Version Model 0.5.005 Notel	1.00 270 ⊾
ADD CHARGEPOINT	Image: Desire of the second	1. П ОУ 70 - ЛГ
ADD CHARGEPOINT	12 Configure you chargepoint Ceneral Charge Point ID* Serial No Iocu Version DKA71795 0.2.51 Mcu Version Model 0.5.00f V1 Main Fuse* No of Connector 100 2	лл Эмь лг гs*
ADD CHARGEPOINT II C C	12 Configure you chargepoint Ceneral Charge Point ID* Serial No IOCU Version DKA71795 0.2.51 MCU Version Model 0.5.00f V1 Main Fuse* No of Connector 100 2 RFID Reader Enabled* •	ци 39%ъ ЛГ тs *
ADD CHARGEPOINT II C C	12 Configure you chargepoint Ceneral Charge Point ID* Serial No IOCU Version DKA71795 0.2.51 MCU Version Model 0.5.00f V1 Main Fuse* No of Connector 100 2 RFID Reader Enabled* True	ци 99%ъ ЛГ тs *



Charge Point Limit	ه ﷺ 100 mil. * Max Socket Limit * 10	
32	16	
Back Office 🚯		
Select your back of	ffice	
Custom	•	
Endpoint *		
<u></u>		13. Scroll down to the Back Off section and select the Select v
Connectivity		back office field.
Network Interface *	• 0	
GSM_COMM_IN	TERFACE -	
GPRS APN 🏮	GPRS Password	
GPRS Username		
LED		
LED Active * 🚯		
LED Active * 😗 True	-	14 Use* O No of Connectors*
LED Active * 🕚 True		14 Use* 0 No of Connectors *
LED Active * 🚯 True	0 <	No of Connectors *
LED Active * 🚯 True		RFID Reader Enabled *
LED Active * 🚯 True		RFID Reader Enabled * 0 True
LED Active * 🔞 True		RFID Reader Enabled * True Custom Monta
LED Active * 🔞 True		RFID Reader Enabled * () True Custom Monta Fuuse
LED Active * () True		RFID Reader Enabled * True Custom Monta Fuuse Clenergy EV
LED Active * () True	o <	RFID Reader Enabled * True Custom Monta Fuuse Clenergy EV ChargePlace Scotland
LED Active * () True	ergy EV from the	RFID Reader Enabled *
LED Active * () True	ergy EV from the	RFID Reader Enabled *
LED Active * () True	ergy EV from the	RFID Reader Enabled *
LED Active * True	ergy EV from the	RFID Reader Enabled * 2 RFID Reader Enabled * True Custom Monta Fuuse Clenergy EV ChargePlace Scotland Stark Charge Saascharge EVCharge.Online Place to Plug
LED Active * True	ergy EV from the	RFID Reader Enabled * 2 RFID Reader Enabled * True Custom Monta Fuuse Clenergy EV ChargePlace Scotland Stark Charge Saascharge EVCharge.Online Place to Plug Tewdric Energy
LED Active * () True	ergy EV from the	RFID Reader Enabled * 2 RFID Reader Enabled * True Custom Monta Fuuse Clenergy EV ChargePlace Scotland Stark Charge Saascharge EVCharge.Online Place to Plug Tewdric Energy Parkable







CLENERGY EV

Endpoint *	
wss://clenergy.online:8081/	
Connectivity	
Network Interface * 👩	
GSM_COMM_INTERFACE	17. Select the relevant network
GSM COMM INTERFACE	option from the drop-down men
	your installation and enter the
WIFI_COMM_INTERFACE	required network credentials to
ETH_COMM_INTERFACE	establish a connection
	catabilari a connection.
LED	
LED Active * 🚯	Please note: Only one network
True	connection type can be used at an
	connection type can be used at an
Other	one time.
Solar CT * Offline Mede * O	
True Epico	
False	
	一 一 一 一 一 一 一 一 一 一 一 一 一 一 一 一 一 一 一
Unlock Connector on EV Disconnect *	Point Limit * Max Socket Limit * 1
Holock Connector on EV Disconnect*	Point Limit * Max Socket Limit * @ 16
Uplock Connector on EV Disconnect*	Image: Second
Unlock Connector on EV Disconnect *	Back Office
Unlock Connector on EV Disconnect*	Point Limit * Max Socket Limit * I6 Back Office Select your back office
Unlock Connector on EV Disconnect *	Point Limit * Max Socket Limit * 16 Back Office Select your back office Custom
Unlock Connector on EV Disconnect *	Point Limit * Max Socket Limit * Back Office Select your back office Custom
Unlock Connector on EV Disconnect*	Point Limit * Max Socket Limit * 16 Back Office Select your back office Custom Bidpoint *
	Back Office Select your back office Custom Max Socket Limit * Bidpoint * wss://clenergy.online:8081/
	Point Limit * Max Socket Limit * 16 Back Office Select your back office Custom Bidpoint * Wss://clenergy.online:8081/
	Point Limit * Max Socket Limit * 16 Back Office Select your back office Custom Endpoint * wss://clenergy.online:8081/ Connectivity
Infock Connector on EV Disconnect • •	Point Limit * Max Socket Limit * 16 Back Office Select your back office Custom bidpoint * wss://clenergy.online:8081/ Connectivity Network Interface *
Unlock Connector on EV Disconnect *	Point Limit * Max Socket Limit * 16 Back Office Select your back office Custom Bidpoint * wss://clenergy.online:8081/ Connectivity Network Interface * G GSM_COMM_INTERFACE
Index Connector on EV Disconnect :	Back Office Point Limit * Max Socket Limit * 16 Back Office Pack office Select your back office Custom Bidpoint * wss://clenergy.online:8081/ Connectivity Network Interface * Pack GSM_COMM_INTERFACE
Interferences on EV Disconnect Contract Connecting Using a 4G/SIM vork, enter eapn1.net in the GPRS field and clenergy in the GPRS word and GRPS Username fields.	Aul 99% Point Limit * Max Socket Limit * 16 Back Office Select your back office Custom Fidpoint * wss://clenergy.online:8081/ Connectivity Network Interface * GSM_COMM_INTERFACE CPRS APN GPRS Password
Index Connector on EV Disconnect *	A and solver A
Index Connector on EV Disconnect (III O C Connecting using a 4G/SIM York, enter eapn1.net in the GPRS field and clenergy in the GPRS word and GRPS Username fields.	Aut 996 A
Index Connector on EV Disconnect (II C C C C C C C C C C C C C C C C C C	And 59% A
Index Connector on EV Disconnect (II O C Connecting using a 4G/SIM vork, enter eapn1.net in the GPRS field and clenergy in the GPRS word and GRPS Username fields.	Point Limit * Max Socket Limit * 16 Back Office Select your back office Custom Bidpoint * Wss://clenergy.online:8081/ Connectivity Network Interface * GSM_COMM_INTERFACE GPRS APN GPRS Password CPRS Username
Index Connector on EV Disconnect (III C) C C C C C C C C C C C C C C C C C C	Point Limit * Max Socket Limit * 16 Back Office Select your back office Custom Hidpoint * wss://clenergy.online:8081/ Connectivity Network Interface * GSM_COMM_INTERFACE GPRS APN CPRS Password CPRS Username
Line Connection on EV Disconnect I O C Connecting using a 4G/SIM rork, enter eapn1.net in the GPRS field and clenergy in the GPRS word and GRPS Username fields.	Point Limit * Max Socket Limit * • 16 Back Office • Select your back office Custom Endpoint * wss://clenergy.online:8081/ Connectivity Network Interface * • GSM_COMM_INTERFACE GPRS Password • GPRS Username LED
Lick Connector on EV Pictorent (II O C Connecting using a 4G/SIM ork, enter eapn1.net in the GPRS field and clenergy in the GPRS word and GRPS Username fields.	Point Limit * Max Socket Limit * • 16 Back Office • Select your back office Custom Bidpoint * wss://clenergy.online:8081/ Connectivity Network Interface * • GSM_COMM_INTERFACE GPRS APN • GPRS Username LED LED LED Active * •



